



NFC SETUP INSTRUCTION FOR PROGRAMMABLE LED DRIVER

“NFC-V reader “ APP for Android Phone


Antron Electronics Co.,Ltd

□ Step 1

Download and install the .apk file of “NFC-V reader” APP on your Android phone.

You can download the apk file from our website. See below link:

<https://antron.com.tw/app-download/>

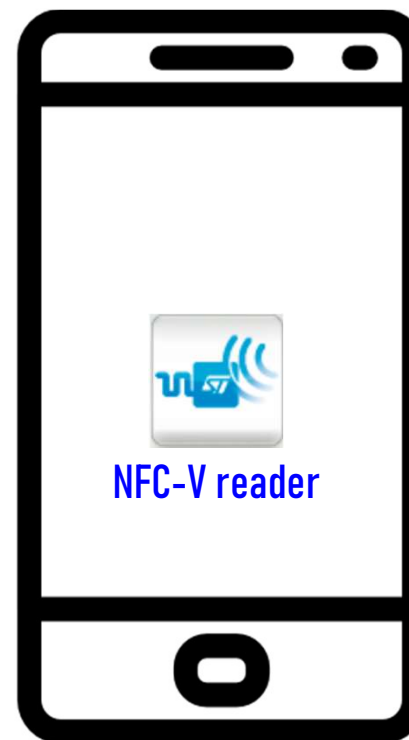

□ Step 2


Open NFC-V reader and take your smart phone near to the NFC mark on the driver. You will hear “DangDang” when the connection is ok.



□ Step 3

You can see the NFC ic information first, and please touch “BASIC FORMAT” to go to mail menu.


Touch “READ” to see the original setting.

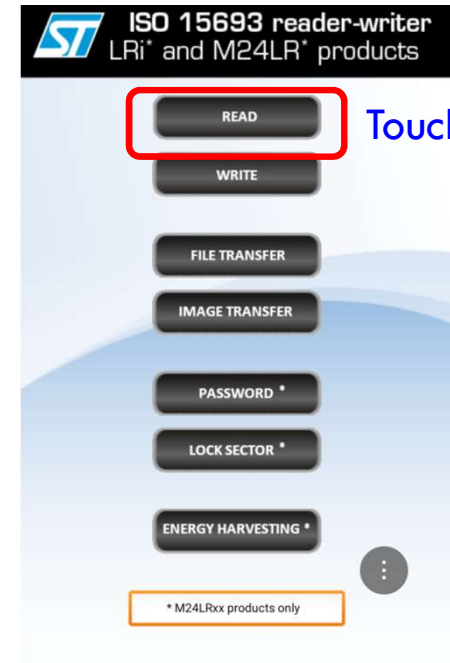

□ Step 4

After you touch “READ”, you will see below page, please directly touch “READ” again, don’t modify the value.

Then next page will show the original output current code.

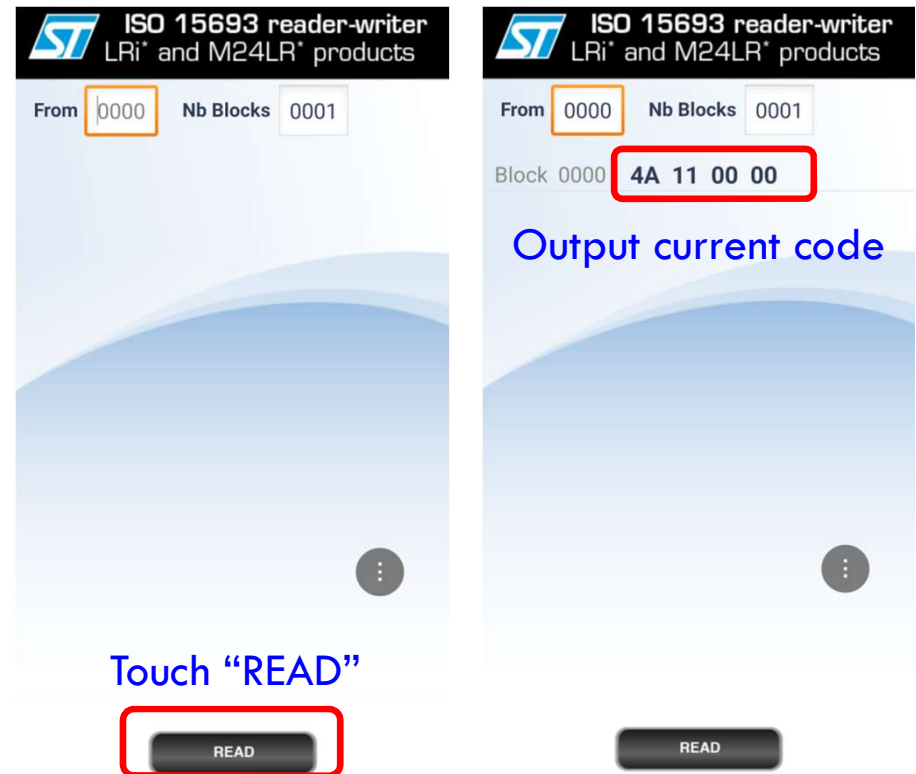

□ Step 5

Touch “WRITE” on the main menu to setup the output current code.
You can find the code list on our spec sheet.

Output Current Code List

Current Value (mA)	Correspond lout Code				Current Value (mA)	Correspond lout Code			
	Location					Location			
	0	1	2	3		0	1	2	3
350	22	01	00	02	850	CD	02	00	02
400	4D	01	00	02	900	00	03	00	02
450	73	01	00	02	950	2B	03	00	02
500	A2	01	00	02	1000	5C	03	00	02
550	CA	01	00	02	1050	84	03	00	02
600	F2	01	00	02	1100	B6	03	00	02
650	1F	02	00	02	1150	E0	03	00	02
700	4B	02	00	02	1200	1A	04	00	02
750	76	02	00	02	1250	4C	04	00	02
800	A5	02	00	02					

Output current code and correspond current value



□ Step 6

Keep the block “0000”. Key in output current code and touch “WRITE”.
When you see “Write Sucessfully”, the setup step is finished.



□ Step 7

You can go to main menu and repeat Step 4 to confirm the new setting.

Then, the output current value of the programmable driver is what you want!

If you have any question, please contact Antron sales team.

Antron Electronics Co.,Ltd

TEL: +886-6-726-3906

Email: info@antron.com.tw