




<b>Model Name</b>	P3C2750S98DLI
<b>Output Mode</b>	Constant Current
<b>Input Voltage</b>	347 Vac
<b>Input Frequency</b>	50/60 Hz
<b>Isolated Dimming</b>	3 in 1 ( PWM, 1-10V, Resistance) Dim to 10%
<b>Surge Rating</b>	2KV
<b>Warranty</b>	5 Years $TC \leq 75^{\circ}C$ 3 Years $75^{\circ}C \leq TC \leq 90^{\circ}C$

## Product Specification



Output Power (W)	Output Voltage (V)	Output Current (A)	Start Temp. (°F/°C)	Tcase Temp. (°F/°C)	Input Current (A)	Input Power (W)	Inrush Current (A)	THD (%)	Power Factor	Efficiency (%)
Max. 98	27-55	1.4-2.75	Min 32/0	Max. 194/90	0.32@347V	113	Max. 40	Max. 20	Min. 0.9	Typ. 86


## Wire Diagram

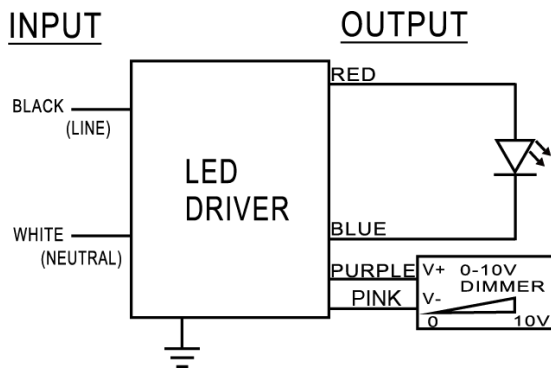

Maximum Wiring Distance (at full load) is 18AWG/18Feet  
LED case should be grounded

Lead Length	Inch	Cm
Black	6	15.2
White	6	15.2
Green	NA	NA
Red	6	15.2
Blue	6	15.2
Purple	7.1	18
Pink	7.1	18

## Enclosure

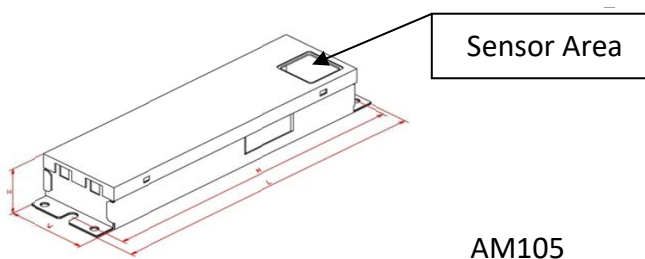

Enclosure	Inch	Cm
Length(L)	9.5	24.1
Width(W)	2.4	6.1
Height(H)	1.46	3.7
Mounting(M)	8.9	22.6

# HOW TO USE NFC PROGRAMMING

## 1. Downloading the App

- (1.) Open the **App Store /Google Play** on your smart Phone.
- (2.) Search for **Antron App**.
- (3.) Tap **Download** and wait for the app to install.

## 2. App Setup and Operation


- (1.) **Launch the App**  
Open the app by tapping the Antron LED Driver icon on your home screen.
- (2.) **Ensure NFC is Enabled**  
Verify that the NFC functionality on your device is turned on.
- (3.) **Scan the Driver**  
Place your device's NFC area near the tag's NFC logo to start scanning.
- (4.) **Automatic Detection**  
Once detected, the app will navigate directly to the corresponding operation interface.
- (5.) Before making any setting changes, please ensure that the configured model matches the read driver model. If not, please click "Read" to re-pair the model.



Put your smart phone onto Programmable Driver's NFC area.

## 3. Configuring Driver Settings

- (1.) **Current Settings**  
In the Current field, input the desired current value.  
The maximum and minimum current limits will be displayed below for reference.
- (2.) **Dimming Speed**  
Select either Fast or Slow based on your preference.

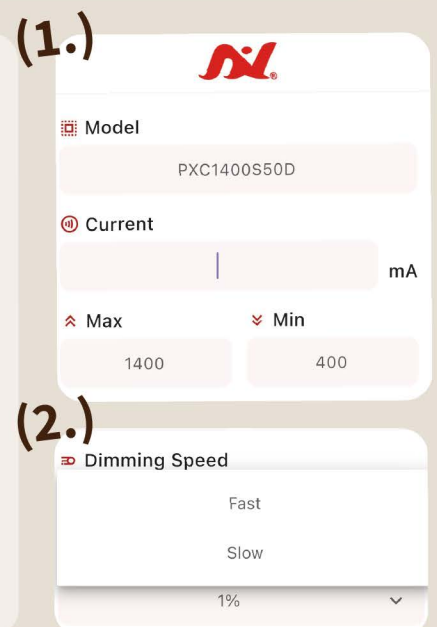

**(3.)**

Dimming Level

1%

OFF

10%

**(4.)**

Dimming Curve

Linear

Log

**(5.)**

Completed



OK

**(3.) Dimming Level**

Adjust the minimum output power via the dimmer to 1%, 10%, or off, according to your requirements.

**(4.) Dimming Curve**

Choose between Linear or Log dimming for your application.

**(5.) Apply Settings**

Once all the desired settings are selected, tap Write and bring your device's NFC area close to the LED Driver's NFC logo to initiate programming. When the screen displays Completed, the scanning and configuration are finished.

## 4. Troubleshooting

**(1.) Unable to Detect the Driver**

Ensure NFC is enabled on your Apple device.

Check that the NFC tag is clean and free of obstructions.

**(2.) Settings Not Applying**

Confirm that the device is properly scanned.

Confirm that the input current value is within the product's maximum and minimum limits.

Retry applying settings and ensure you tap Write.

**(3.) App Crashing or Freezing**

Restart the app or your device.

Ensure you're using the latest app version.

**(4.) Contact Support**

For further assistance, contact our support team:

Email: [info@antron.com.tw](mailto:info@antron.com.tw)




## Programmable Tool

- Put the programmable wand above the NFC mark of the driver to start programming
- Download the software from [www.antron.com.tw](http://www.antron.com.tw)



## I<sub>out</sub> vs V<sub>out</sub> Curve

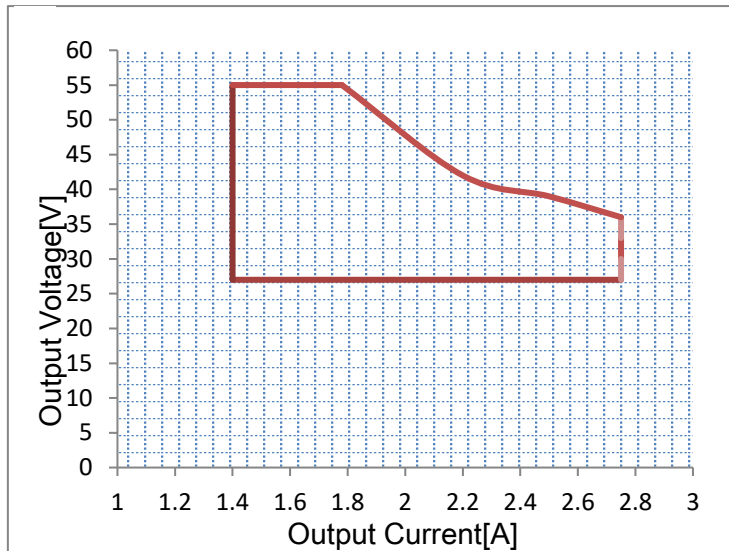

## Output Current Code List

Output Current Code List

Current Value (mA)	Correspond Iout Code				Current Value (mA)	Correspond Iout Code			
	Location					Location			
	0	1	2	3		0	1	2	3
1400	05	78	00	0B	2150	08	66	00	0B
1450	05	AA	00	0B	2200	08	98	00	0B
1500	05	DC	00	0B	2250	08	CA	00	0B
1550	06	0E	00	0B	2300	08	FC	00	0B
1600	06	40	00	0B	2350	09	2E	00	0B
1650	06	72	00	0B	2400	09	60	00	0B
1700	06	A4	00	0B	2450	09	92	00	0B
1750	06	D6	00	0B	2500	09	C4	00	0B
1800	07	08	00	0B	2550	09	F6	00	0B
1850	07	3A	00	0B	2600	0A	28	00	0B
1900	07	6C	00	0B	2650	0A	5A	00	0B
1950	07	9E	00	0B	2700	0A	8C	00	0B
2000	07	D0	00	0B	2750	0A	BE	00	0B
2050	08	02	00	0B	2750 OFF	0A	BE	01	0B
2100	08	34	00	0B					

Note: **Factory default current is set to the maximum current unless otherwise specified.** For drivers containing Revision C of their firmware (contact factory for date code of implementation), it is also possible to adjust the minimum dimming level and the dimming speed by programming the location 2.



## Programmable Driver Options (App Note)


All programmable drivers accept a 16-bit hexadecimal code to program the output current (Iout) of the driver. The Iout programming codes are documented in the computer based-programming software (ST-TOOLS.exe) or from the driver's IOUTCODE.pdf file. The Locations below 0, 1, 2, 3 contain the basic code for a specific output current value.

Location | 0 | 1 | 2 | 3 |  
Value | 00 | 00 | 00 | 00 |

For drivers containing Revision C of their firmware (contact factory for date code of implementation), it is also possible to adjust the minimum dimming level and the dimming speed  $\leq 1.0$  sec. This adjustment is made by modifying location 2 of the programming code while keeping the other locations set for the desired output current. Specifically, the location 2 values are defined as:

Linear Dimming	Logarithmic Dimming
<ul style="list-style-type: none"> <li>• 00 =&gt; Dim to 1%</li> <li>• 01 =&gt; Dim-to-OFF</li> <li>• 02 =&gt; Dim to 10%</li> </ul>	<ul style="list-style-type: none"> <li>• 10 =&gt; Dim to 1%</li> <li>• 11 =&gt; Dim-to-OFF</li> <li>• 12 =&gt; Dim to 10%</li> </ul>

## Dimming Curve

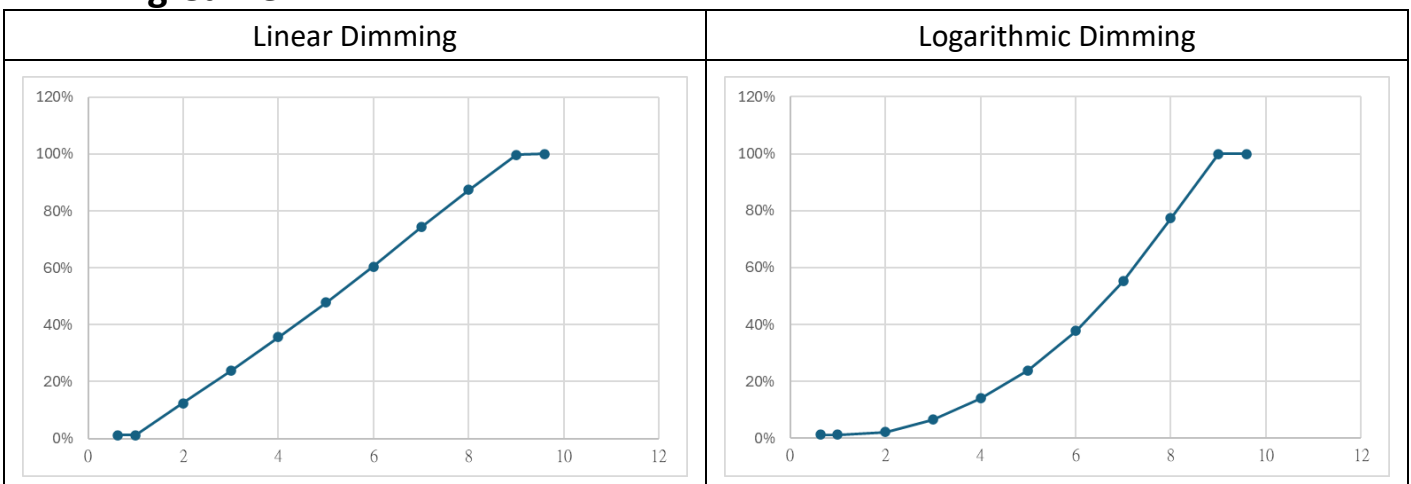

Data is based upon tests performed by Antron Electronics in a controlled environment and representative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.